




## IMPORTANT

Keep these instructions for future reference. Your child's safety may be affected if you do not follow these instructions.

### Instruction Leaflet

### Push Me Cube

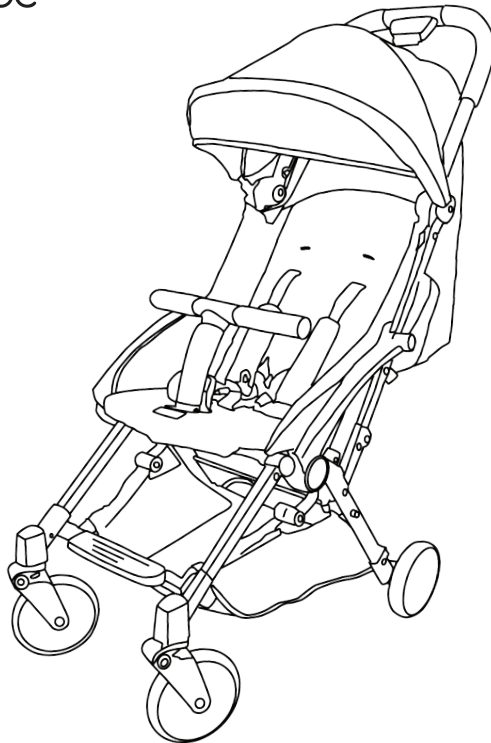

\*Product available in several colour options

\*Product detail may vary slightly from images shown





This vehicle is intended for children from birth up to a maximum weight of 15kgs.

Complies with BS EN 1888 : 2012


Customer Care Line: 01454 326 568

# Parts List

- |                      |                          |
|----------------------|--------------------------|
| 1 Folding buttons    | 8 Foot rest              |
| 2 Canopy             | 9 Harness buckle         |
| 3 Shoulder protector | 10 front bumper          |
| 4 Armrest            | 11 Seat recline          |
| 5 Rear wheels        | 12 Brake lever           |
| 6 Basket             | 13 Handle release button |
| 7 Front wheels       | 14 Flat plate            |

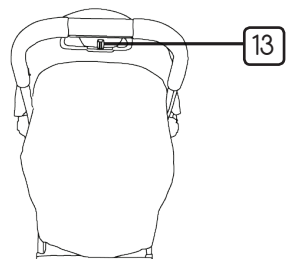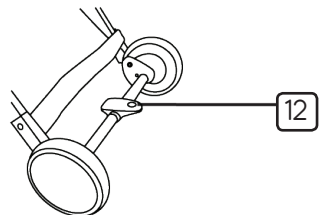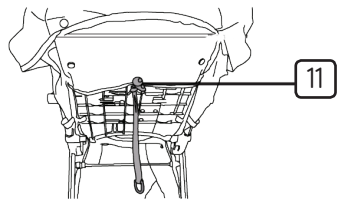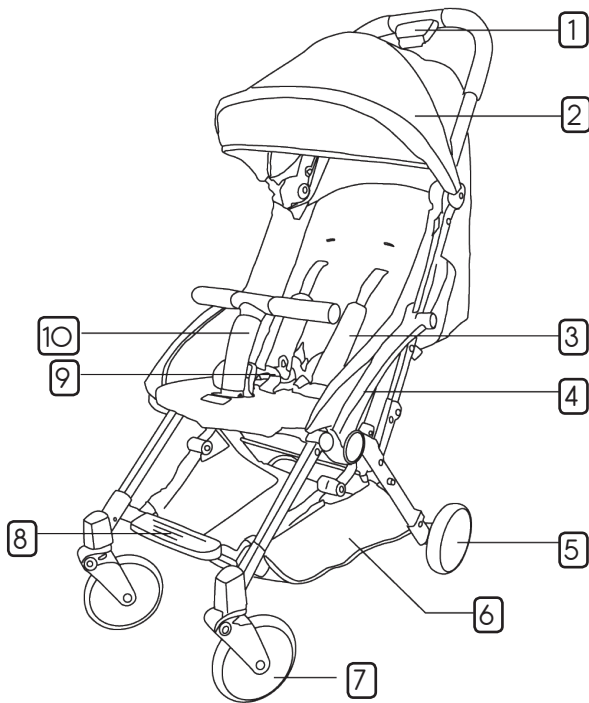


## Unfolding and assembling

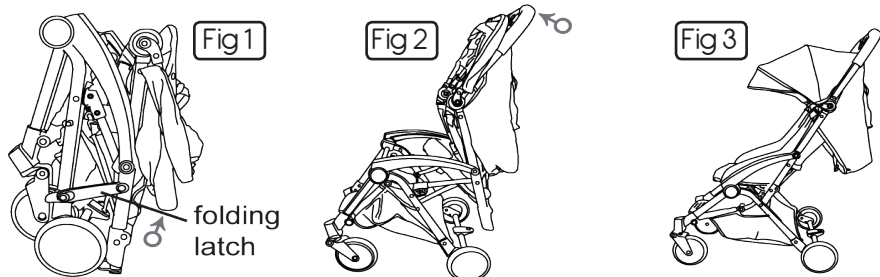


### To open the stroller

Release the folding latch on the side of the stroller. Fig 1. Now in one fluid movement, lift the handle upwards (Fig 2) until the stroller locks in place. Fig 3

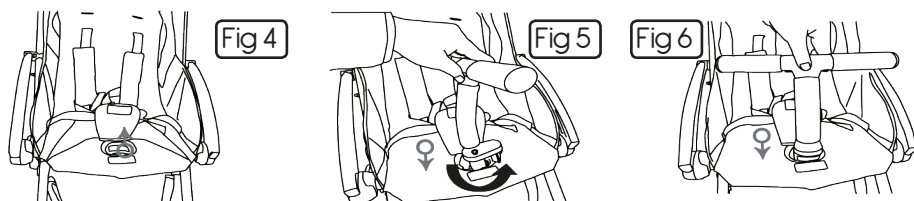

### To insert the bumper bar


Undo the two press studs under the seat cover at the front and pull the small flap back. Fig 4. Slot the end of the bumper in to the hole and turn 90 degrees. Fig 5. When the bumper is facing forward, push down firmly making sure none of the seat is caught. You will hear a click when it locks in place. Fig 6.

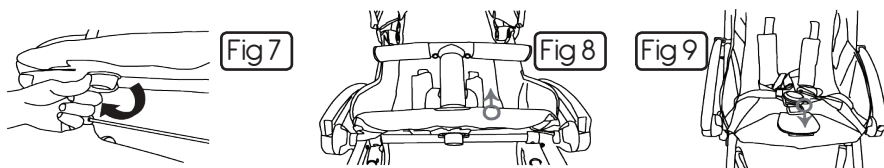

### To remove the bumper bar


You can remove the bumper bar and use a flat plate. Turn the button on the bottom of the bumper (Fig 7) bar 90 degrees and lift the bar out. Fig 8. Insert the flat plate and pull the flap back down. Fig 9.

## Usage instructions

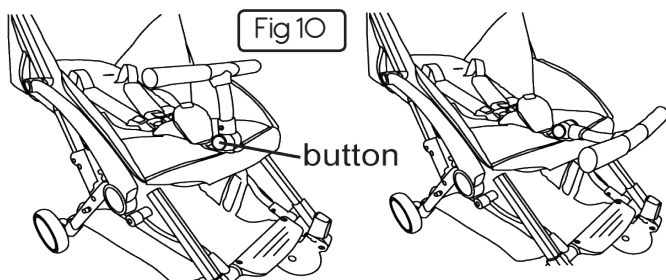

### To use the bumper

You can lower the bumper bar by pressing the button on the bottom of the stem and pushing it forward. Fig 10.

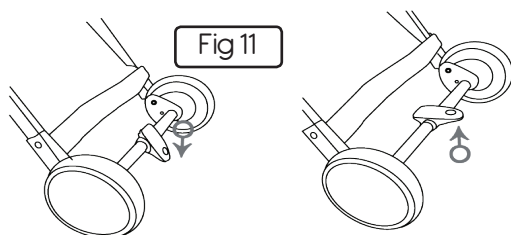



### To operate the brakes

With your foot, push down on the back of the brake to lock the rear wheels or press down on the front of the brake to release them. Fig 11.

**WARNING** Apply all the brakes whenever you park the stroller.

**WARNING** - Ensure that all the locking devices are engaged before use.

**WARNING** Apply all the brakes whenever you park the stroller.

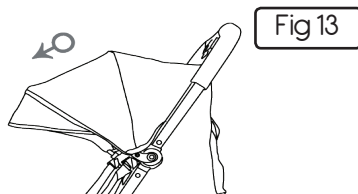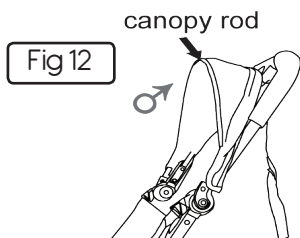

### To adjust the canopy

Grasp the frame of the canopy and pull back to retract (Fig 12) or push forward to extend. Fig 13.

Fig 14


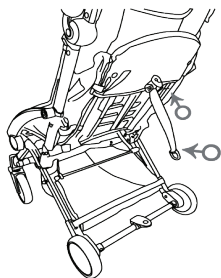



Fig 15

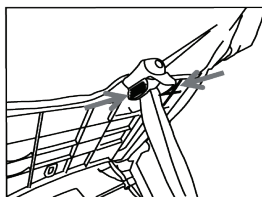

## To adjust the seat unit

To raise the seat unit, grasp the ring on the bottom of the recline strap and push the block forward. Fig 14. To recline the seat unit, pinch the butterfly clasp and pull downwards until desired position is reached. Fig 15.

Fig 16

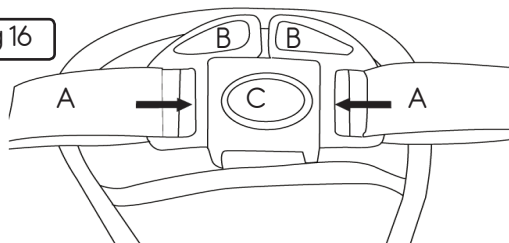

## To use the harness

To release the harness, press the centre button C and slide the waist straps A away from shoulder straps B. Fig 16

## To secure and adjust the harness

Slide the waist harness [A] in to the shoulder strap [B] and then push in to the central buckle housing [C].

To release the buckles simply push the button in the centre of the buckle housing.

Fig 17.

**WARNING** Always use the crotch strap in combination with the waist belt.


**WARNING!** For babies aged 0 – 6 months the harness must be fed through the slots to prevent risk of strangulation.

### NOTE

A raincover is supplied with this stroller. The raincover should be placed over the hood to use and secured with the tabs. It should be folded and placed in the basket when not in use.

Fig 17



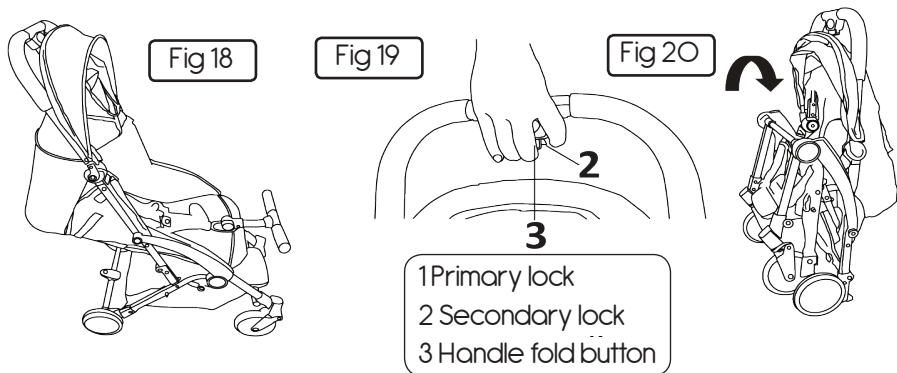


## To fold the stroller

Ensure the brakes are engaged, the hood retracted and the bumper bar is down. Fig 18.

To fold the stroller with the handle in an upright position, press in button 1 and then button 2. Fig 19.

Keeping the button held in, slightly lift the handle forward and then push downwards and the stroller will fold. Fig 20.

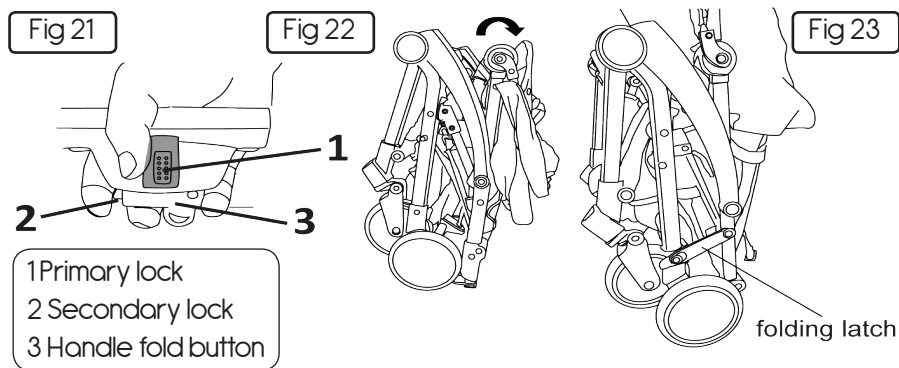

To fold the stroller with the handle collapsed, press all three buttons in the correct order (Fig 21) and when the stroller has folded, pull backwards on the handle. Fig 22. You can now secure the stroller together with the folding latch. Fig 23.

## General care:

- The correct use and maintenance of this stroller is essential.
- Do not use excessive force when folding the stroller.
- If you are having problems, fully open the stroller and repeat the folding procedure.
- Always let wheels down as gently as possible when mounting and dismounting kerbs.
- Always fold the stroller when going up or down stairs.
- Never bump the stroller over these or similar obstacles.
- In some climates mould and mildew can affect the fabric and rain cover. To avoid this, do not fold the stroller when it is wet. Leave it open in a ventilated area until completely dry.
- Always store the stroller in a dry place.
- When storing the stroller in the car, never place other items on top of it.
- Do not exceed the maximum load of 2 kgs in the shopping basket. (Where provided).

## Cleaning:

- Fabric covers and trims may be spot washed using mild detergent and warm water. Leave to dry in a ventilated area away from direct sunlight.
- Avoid leaving your buggy in direct sunlight for prolonged periods of time as this may cause fabrics to fade.
- Do not dry clean, machine wash or tumble dry.
- Metal parts may be cleaned with a damp cloth.
- Always wipe dry. Clean plastic parts with a mild soap and water solution, wipe dry.

## Maintenance:

- Maintain your stroller by lubricating all metal moving parts with a silicone based lubricant. Do not use heavy machine oil or grease as this can attract dirt or grit.
- Check that nothing is loose or broken and that no sharp edges have been exposed. Inspect all joints and the harness, replace any damaged parts immediately.
- Inspect any nuts and bolts regularly to ensure none have worked loose. Tighten as necessary.
- Only use replacement parts and accessories that have been approved by the manufacturer. Failure to do this may invalidate your warranty.

## Safety warnings:

WARNING Never leave your child unattended.

WARNING To avoid injury ensure your child is kept away when unfolding and folding this product.

WARNING Do not let your child play with this product.

WARNING Always use the restraint system.

WARNING This product is not suitable for running or skating.

WARNING Your child's safety is your responsibility.

WARNING Any load attached to the handle affects the stability of the pram / pushchair.

- Not intended for children weighing more than 15kgs.

This stroller is designed for one child only.

- The brake must always be engaged when placing and removing children from the stroller.
- Any load attached to the handle and/or on the backrest and/or on the sides of the vehicle will affect the stability of the stroller.
- Lift a child in and out of the stroller. Do not allow a child to stand on the footrest or seat.
- Do not use accessories that have not been approved by the manufacturer.
- Never use the buggy to carry a child up and down stairs or escalators. Remove your child and fold the pushchair when going up or down stairs / escalators.
- For newborns, it is advisable to use the seat units in the fully reclined position.

NOTE D rings have been provided for the attachment of a separate safety harness approved to BS 6684 (if required). The points for attachment are located on the waist straps of the harness.

This product complies with BS EN 1888 : 2012

For all technical queries please call: 01454 326 568  
Imported by:

The Red Kite Baby Co Ltd  
35 Lavenham Road  
Beeches Industrial Estate  
Yate  
Bristol  
BS37 5QX

**RedKite**