



IMPORTANT! KEEP FOR FUTURE REFERENCE

Read these instructions carefully before use and keep them for future reference.

Your child may be hurt if you do not follow the instructions.

Please dispose of all packaging material carefully.

Instruction leaflet

Feed Me Deli



Suitable for babies up to a maximum weight of 15 kgs.
who can sit upright and unaided.

Complies with: BS EN 14988 Parts 1 & 2 : 2006
Customer Care Line: 01454 326 568

Parts List


Parts

1. Seat Unit
2. Top right leg
3. Bottom right leg
4. Top left leg
5. Bottom left leg
6. Inset tray and tray
7. Foot rest
8. 2 x seat screws
9. 2 x spacers
10. 2 x foot rest screws

Tools required for assembly

Cross head screwdriver
(Not supplied)

NOTE Carefully remove all parts from the packaging and lay them out in front of you.

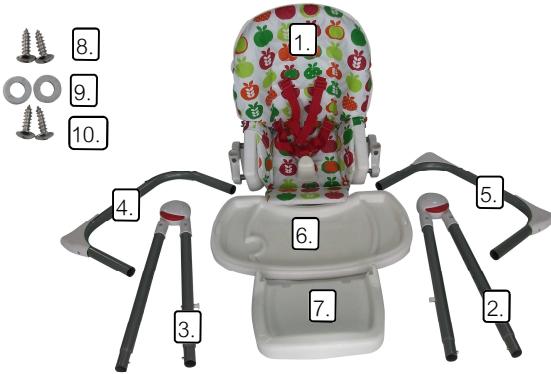

Seat and frame assembly

Slide the top legs through the seat adjusters from the top. Make sure the red buttons on the top of the legs are facing outwards and the numbers on the legs facing forwards.

Push the bottom legs on to top legs Fig 1a ensuring the spring clips have come fully through the holes Fig 1b.

Screw the two seat screws and spacers in to the small hole below the seat height slots on the inside of the front legs. Fig 1c.

To open and close the frame.

Squeeze the buttons on both sides of the legs and slide the back legs outwards. To close the legs simply reverse this process. Fig 2.

Fig 1a.

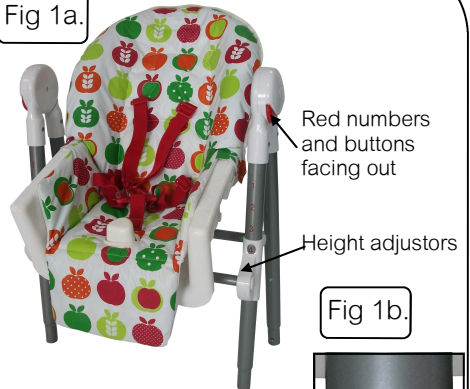


Fig 1b.


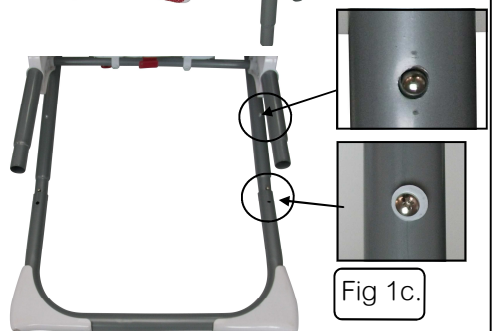


Fig 2.

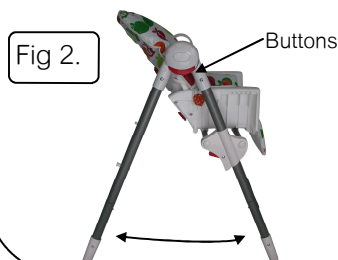

To attach the tray

Squeeze the buttons on the bottom of the tray and slide the tray on to the seat frame. You can choose from 3 different positions. Fig 3.

To attach the foot plate

Slot the recesses on the foot plate on to the bar beneath the seat unit and then pull the bottom of the foot plate towards the front of the chair until it locks in place. Fig 4.

Secure the foot plate with the two remaining screws. The screws fit into the small slots underneath the foot plate.

Height adjustment

To select a different height, squeeze the buttons on both sides of the height adjustment sliders and raise up or drop down to your required height. Release the buttons making sure that the numbers showing through the height window is both the same. Fig 5.

Lie back adjustment

Put your thumb on the top of the seat and your fingers through the hole in the fabric and squeeze together. Raise or lower the seat to your required position. Fig 6.

Tray storage

You can remove the tray and hang it on the pegs on the back legs for ease of storage. Fig 7.

Harness usage and adjustment

To secure your child in the harness, push the buckle prongs (A) + (B) into the buckle housing (C) until they snap into position. Adjust sliders to ensure a snug fit for your child. Repeat for the other side and also for the shoulder straps.

IMPORTANT! Always use the harness.

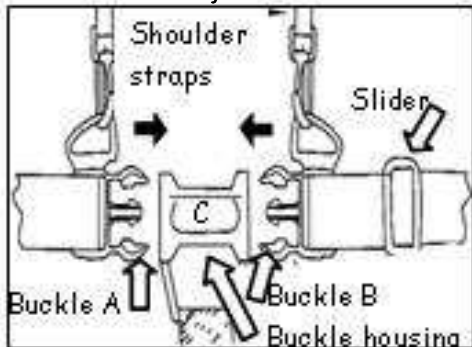


Fig 3.

Underside of tray


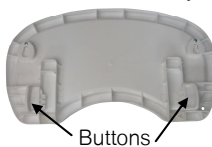


Fig 4.

2. Pull the bottom of the foot plate forward

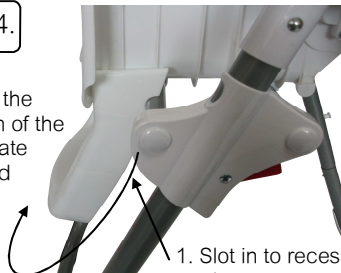

1. Slot in to recess at an angle

Fig 5.



Fig 6.

Lie back adjustor

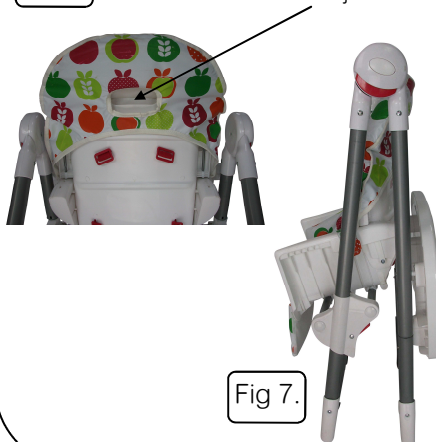


Fig 7.

General care:

- The correct use and maintenance of this high chair is essential.
- Always ensure the high chair is stored in a dry place to prevent mould or mildew developing.
- Avoid leaving your high chair in direct sunlight for prolonged periods of time as this may cause premature fading of colours.

Cleaning:

- Metal parts may be cleaned with a damp cloth and wiped dry with a soft cloth.
- Clean the harness with a mild soap and water solution. Rinse and wipe dry.
- Clean plastic parts with a mild soap and water solution. Rinse and wipe dry.
- Do not use abrasive cleaners or bleach.

Maintenance:

- Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the highchair immediately if any are found.
- Inspect all studs, nuts and screws for tightness. Check that all straps and harness attachment points are in good working order.
- Do not use replacement parts other than those approved by the manufacturer or distributor. Failure to do this may invalidate your warranty.
- See www.redkitebaby.com for further terms and conditions.

SAFETY WARNINGS

●WARNING: Your child's safety is your responsibility.

- WARNING: Do not leave the child unattended.
- WARNING: Do not use the high chair unless all components are correctly fitted and adjusted.
- WARNING: Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the highchair. Never place the highchair near these items.
- Do not use for a child weighing more than 15 kgs.
- Only suitable for children who can sit unaided.
- Always use the 5 point harness provided. Ensure that it is correctly fitted and adjusted before each use.
- Adult assembly required. Always ensure that the high chair has been correctly assembled and that all locking devices have engaged before placing your child in the high chair.
- Ensure that all parts of your child's body are clear of the high chair when assembling, folding or making adjustments.
- Do not allow other children to play with this high chair. It is not a toy. Store safely out of reach when not in use.
- Never carry the high chair when the child is in it.
- Please lift your child in and out of the highchair. Do not allow children to stand on the footrest and seat or to climb in and out of the high chair.
- Only use the high chair on a level floor surface.
- Never add accessories or fittings that have not been approved by the manufacturer.

**This product complies with
BS EN 14988 Parts 1 & 2 : 2006**

**For all technical queries please call:
01454 326 568**

**Imported by:
The Red Kite Baby Co Ltd
35 Lavenham Road
Beeches Industrial Estate
Yate
Bristol
BS37 5QX.**

RedKite™